

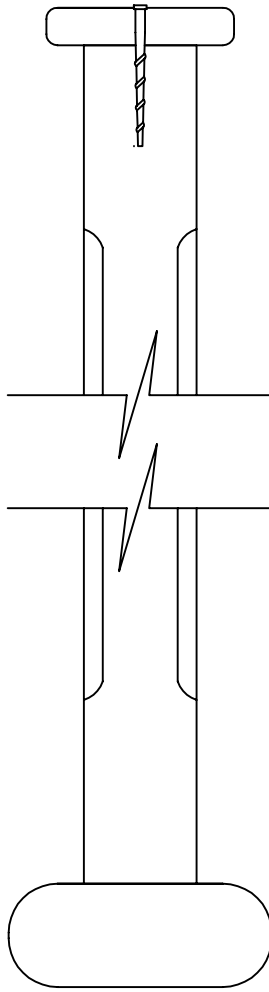
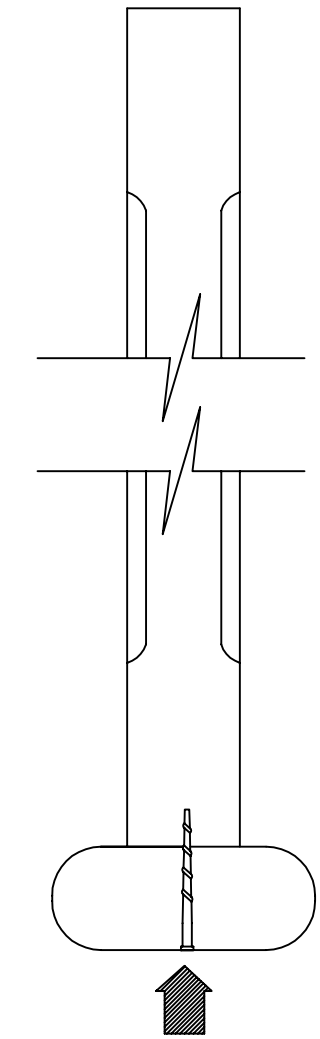


STEP TWO:  
DECK SCREW  
FROM TOP OF  
TRIM PIECE TO  
SPINDLE

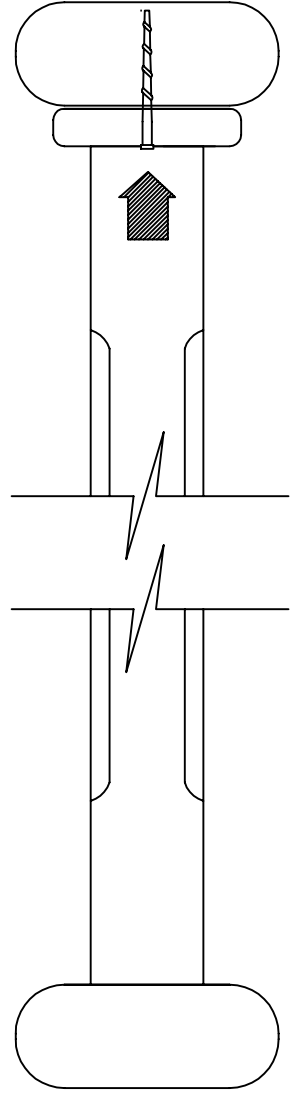

STEP THREE:  
DECK SCREW  
FROM BOTTOM  
OF TRIM PIECE  
UP THROUGH  
TO TOP RAIL

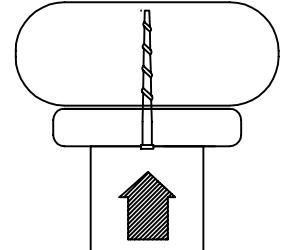

STEP ONE:  
DECK SCREW  
FROM BOTTOM  
OF RAIL TO  
SPINDLE

